



EasyPave Grass fill

Medium Loads (over 1,000Lbs)

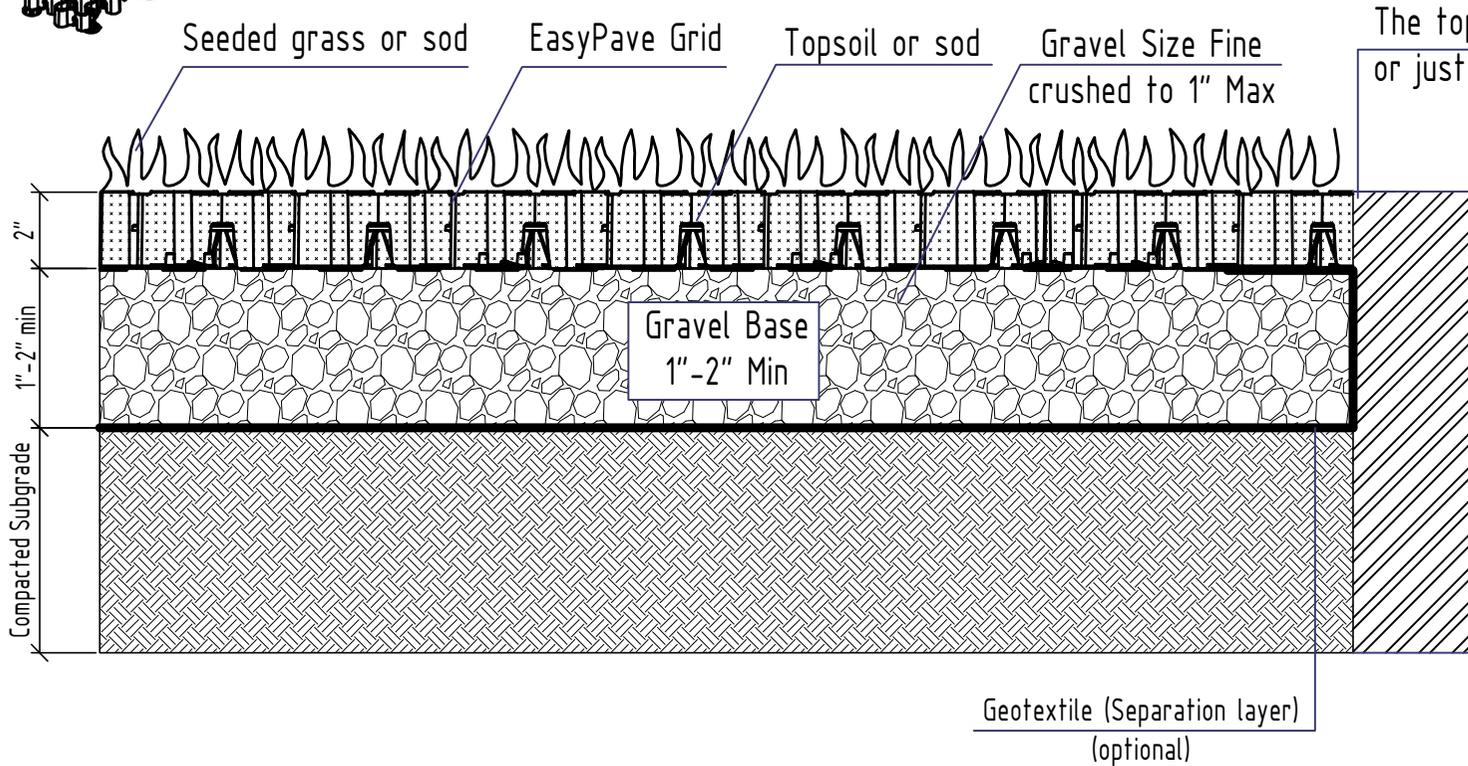

The top of the Easypave grid should be flush or just below the surrounding surface

EasyPave (art.8100-M)

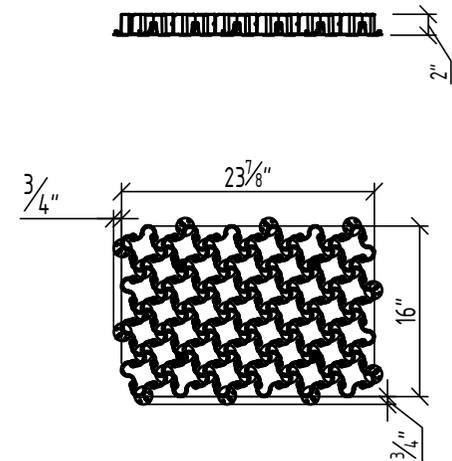

NOTES:

1. The base height shown in the cross-section depends on specific site and loading conditions.
2. Layers shown in cross-section need to be compacted.
3. Seeding: Fill the soil or growing area to the top of the grid. Apply seeding based on the instructions of the supplier.
4. Sodding: Fill Topsoil to half the height of the grid. Press sod within the grid so that the grid's top is leveled with the soil and roots. Only the grass's leaves should be extending above the grid.
5. Geo-textile is to be used for stability and to prevent mixing between layers.
6. Anchors are recommended for slope installations of more than 10%.
7. This drawing is for conceptual design and information use only.

Application

Permeable Grass Parking lots, Parking Pads, Driveways, Erosion Control

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS		FINISH		STAIRS AND BREAK SHOPS		NO NET SCALE DRAWING		REVISION	
SURFACE FINISH									
TOLERANCES								TITLE: EasyPave Grass fill (Medium Loads)	
LINEAR								ARTICLE: 8100-M	
ANGULAR									
DATE	NAME	SIGNATURE	DATE						
DATE									
DATE									
DATE									
						MATERIAL:	Plastic		

